


GA SERIES / MODEL GA1171

Standard Coverage / Decorative Sprinkler

Standard Response Sprinkler

Concealed Sidewall Sprinkler

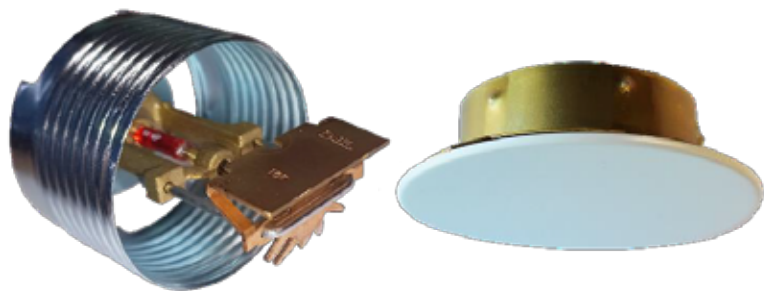

PRODUCT DESCRIPTION

The concealed sprinkler model GA1171 is a pendent sprinkler with standard coverage, decorative, due to the flat cover that adapts very easily to all types of flat surfaces.

The GA1171 sprinkler is standard response with a 5mm bulb.

The product consists of three parts, the sprinkler, a crown screwed to the sprinkler and the flat cover which, is made up of two parts joined by a thermal weld adjusted to the appropriate temperature, so that, when it detects the heat of a fire, the cover falls off, and let the sprinkler completely uncovered so that it can carry out the discharge.

It is the best solution in places where esthetic is important, such as, hotels, offices, hospitals... The installation is recessed in the wall and is concealed by the flat cover. Only the flat cover with the requested finish will be seen.

The bulb contains a quantity of a special liquid hermetically sealed inside a glass capsule, so that when the liquid expands, the bubble disappears and later, at the right temperature, the bulb breaks, letting the water outlet free to discharge.

TECHNICAL DATA

Nominal "K" Factor	5.6 (80)
Thread Size	1/2" NPT
Temperatures	135°F (57°C) sprinkler, 135°F (57°C) cover plate. 155°F (68°C) sprinkler, 135°F (57°C) cover plate. 155°F (68°C) sprinkler, 155°F (68°C) cover plate. 175°F (79°C) sprinkler, 155°F (68°C) cover plate. 200°F (93°C) sprinkler, 155°F (68°C) cover plate.
Maximum Working Pressure	175psi (12 bar)
Materials	Frame: DZR Brass Deflector: Brass Screw: Brass Bulb Seat: Brass Seal Teflon: Nikel alloy + Teflon Bulb: Glass, 5 mm size Drop Pin: Stainless Steel Cover Plate: Brass Crown for cover Sprinklers: Plated Steel
Reference	GA1171
Cover	CGARO304 – WHITE (RAL9003) – 57°C CGARO305 – WHITE (RAL9003) – 68°C (1.)

- For special finishes, consult the details in advance with the Technical Office.

APPROVALS

The following are the approvals that the GA1171 sprinkler has successfully passed in the laboratory of Underwriters Laboratories (UL).

Concealed standard coverage sprinkler								
Type of response	Reference	Sprinkler Temperature (°C / °F)	Cover Temperature (°C / °F)	Maximum working pressure (bar / psi)	Nominal "K" Factor [(gpm/psi ^{1/2}) / (lpm/bar ^{1/2})	Distance Below Ceiling In.	Thread size (NPT)	Approvals
Standard response	GA1171	57 / 135	57 / 135	12 / 175	5,6 / 80	4 - 6	1/2"	UL / CE / FM
		68 / 155	57 / 135	12 / 175	5,6 / 80	4 - 6	1/2"	UL / CE / FM
			68 / 155	12 / 175	5,6 / 80	4 - 6	1/2"	UL / CE
		79 / 175	68 / 155	12 / 175	5,6 / 80	4 - 6	1/2"	UL / CE
		93 / 200	68 / 155	12 / 175	5,6 / 80	4 - 6	1/2"	UL / CE


OPERATION

When a fire occurs, the flat cover that conceal the sprinkler falls off, when it reaches a certain critical temperature, thanks to its tested and approved thermal bulb.

As the glass bulb begins to heat up, a small bubble inside the bulb decreases. Finally, when the bulb reaches the nominal temperature, it breaks due to the pressure applied by the expansion of the liquid inside.

Thanks to the spring that pushes the bulb seat, it is ejected without suffering any type of hang - up, leaving the way for the flow of water free.

The sprinkler then slide its deflector thanks to the gravity force, remaining in working position.

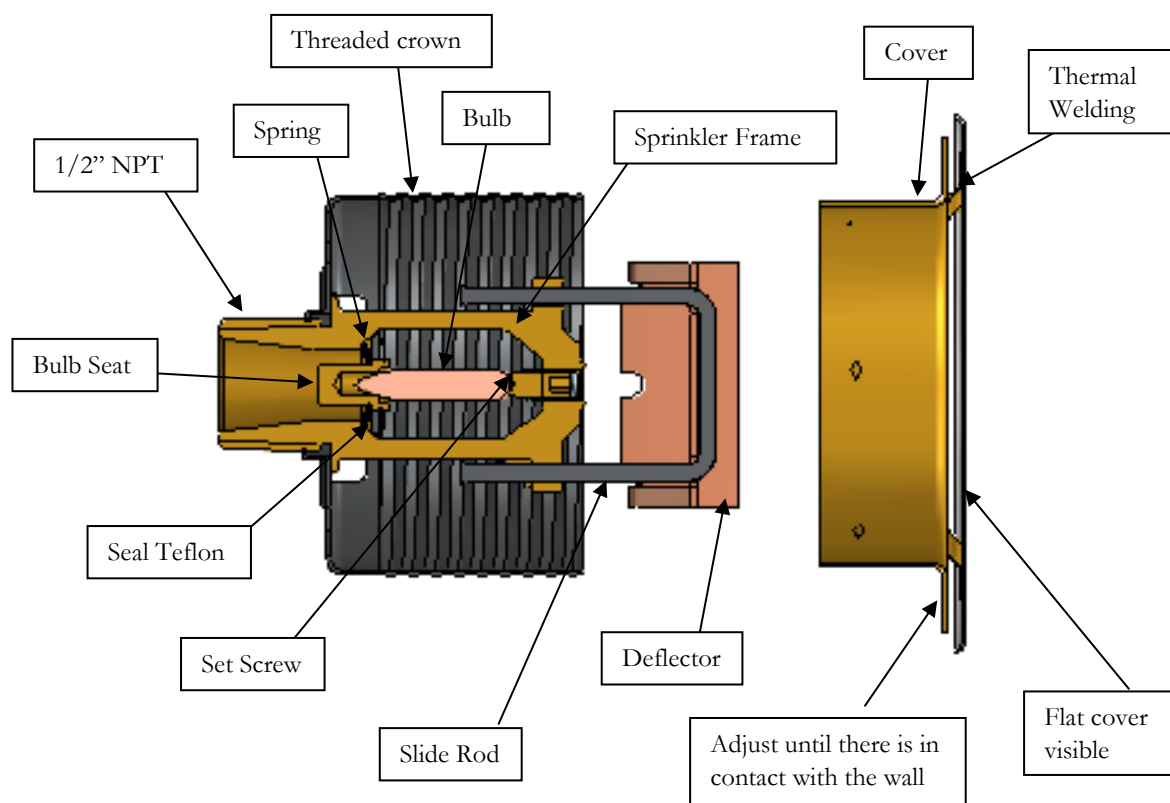


INSTALLATION

Model GA1171 sprinklers are designed to be installed as specified in this section. They must also be installed using the Model CO Sprinkler Wrench.

Do not install any concealed type sprinkler if the bulb is broken, leaking or in bad condition. With the sprinkler horizontally, the air bubble must be clearly visible.

1. First of all, a circular hole with a diameter of between 61 and 66 mm must be prepared in the ceiling for correct installation, centered with the concealed pipe through which the water is to be supplied.
2. Hand threading the sprinkler - crown - protective cap assembly. Remove the protective cap once the sprinkler is installed.

Note: Take care that when threading the assembly the crown is not loosening in relation to the sprinkler. If this happens, remove the protective cap and go directly to step 3.

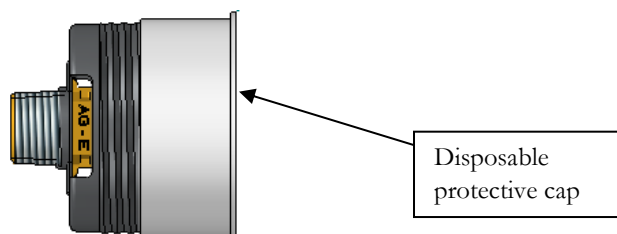


3. Once prepared, proceed to screw the sprinkler with a $\frac{1}{2}$ "NPT thread using the wrench in the following picture. A $\frac{1}{2}$ "NPT (R1 / 2) NPT tight fitting can be obtained on the sprinkler with a torque of 8 to 18 ft-lb (10.8 - 24.4 Nm). Do not tighten sprinklers beyond the maximum recommended torque, as it can cause leaks or deterioration of the sprinklers.



Note: it is important to hold the sprinkler by the body when handling it to prevent damage (do not use force on the deflector, pins, etc.).

4. Once the sprinkler is positioned, check that the deflector moves in and out freely, without any interference.


Note: position the sprayer so that the flat part of the deflector is parallel to the floor, with the TOP mark facing up.

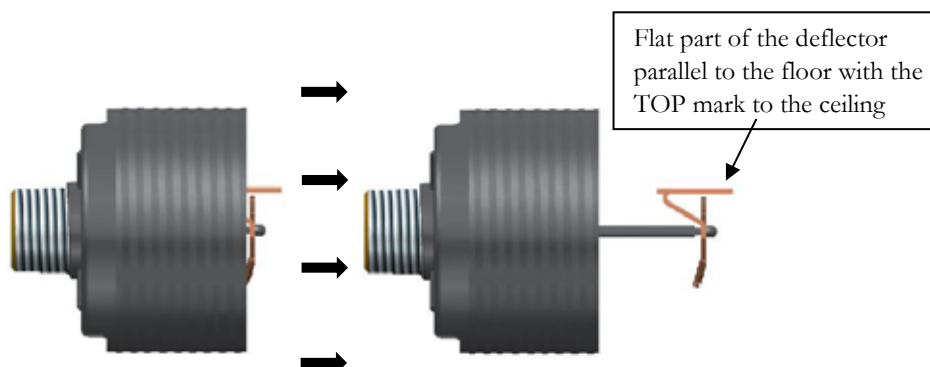

5. Once the sprinkler is connected to the supply pipe, proceed to adjust the cover. The cover is screwed until it touches the ceiling. The cover must be between the

maximum and minimum dimensions when assembled, as shown in the image below.

Note: For proper operation of the sprinkler, the cover must be in contact with the ceiling and not exceed the maximum and minimum dimensions provided.

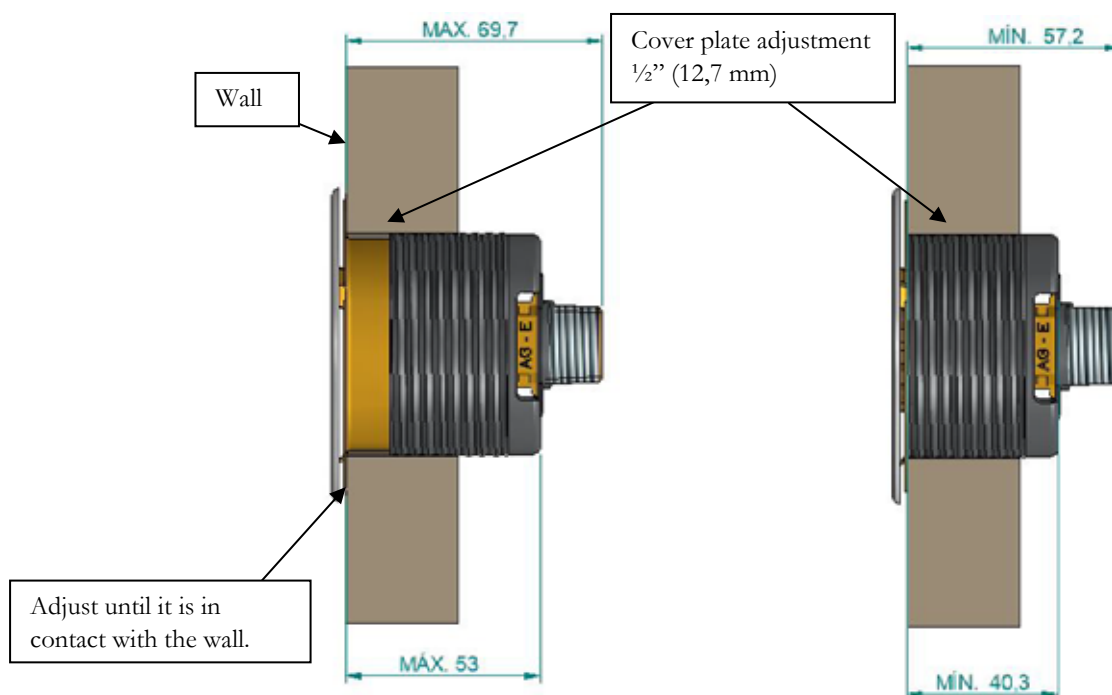

Note: If any of the sprinkler components are damaged or in bad condition, do not install, replace with another one.

MAINTENANCE

GA1171 Series sprinklers must be inspected and maintained in accordance with applicable standards according to their approvals (refer to the appropriate data sheet). Do not clean the sprinklers with soap and water, ammonia, or other cleaning liquids that may be corrosive.

Remove dust with a vacuum cleaner.

If the room where the sprinklers will be installed needs to be painted, paint it before installing them. If not possible, remove covers before painting. If any sprinkler or cover shows any paint on it, replace it immediately.

Sprinklers that are leaking or show visible signs of corrosion should be replaced.

Sprinklers damaged by dropping, knocking, bending, twisting, slipping or similar should be replaced.


A stock of spare sprinklers should be maintained to allow rapid replacement of damaged or cracked sprinklers.

Prior to installation, sprinklers should be kept in the original packaging until use to minimize the damage to sprinklers.

TEMPERATURES RATINGS

Classification	Sprinkler Temperature		Maximum Ceiling Temp.		Bulb Color
	°F	°C	°F	°C	
Ordinary	135	57	100	38	Orange
Ordinary	155	68	100	38	Red
Intermediate	175	79	150	66	Yellow
Intermediate	200	93	150	66	Green

DIMENSIONS

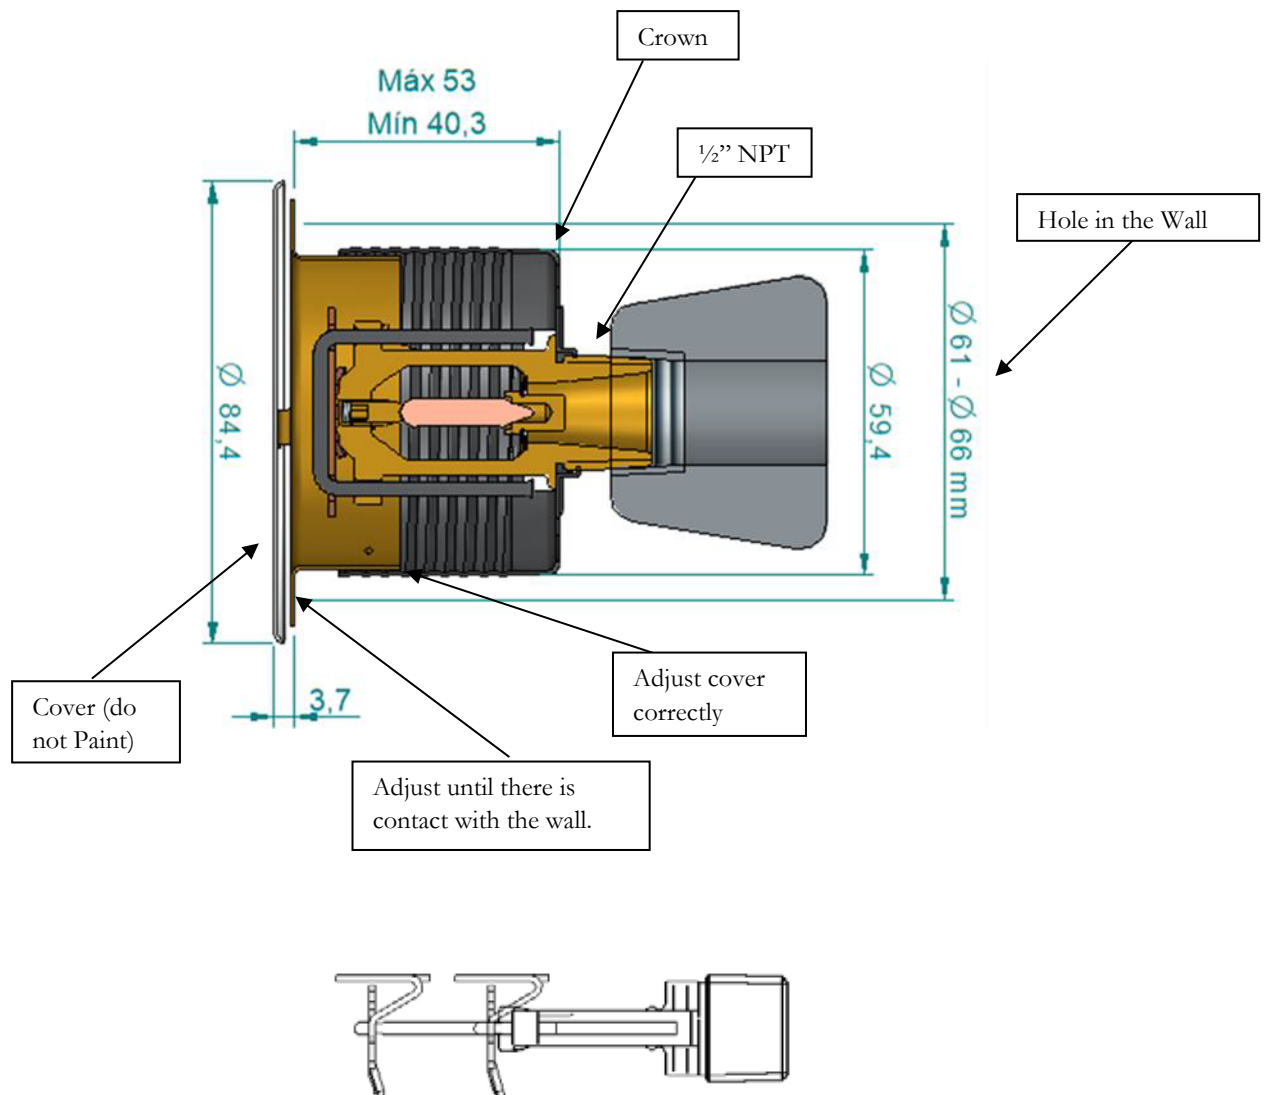

ORDERING INFORMATION

P/N (SPRINKLER)	GAXXXX Y Z
------------------------	-------------------

DESCRIPCION	CODE
Concealed Sidewall	GA1171

Y	1	57°C	135°F
	2	68°C	155°F
	4	79°C	175°F
	5	93°C	200°F

Z	1	BRONZE
---	---	--------

P/N (COVER)	CGARO X 0 Y
--------------------	--------------------

DESCRIPTION	CODE
Flat cover	CGARO

X	3	WHITE (RAL9003)
---	---	--------------------

	0
--	---

Y	4	57°C	135°F
	5	68°C	155°F

Specify:

Quantity	
Model number	
Type	
Orifice	
Type deflector	
Temperature	
Finishes	
Finish of the cover	